



## JLT Oil Separator (2011-17 Mustang GT, 2012-13 Boss & 2015-18 GT350 Driver Side) #3011D

### Installation Instructions

Please review complete instructions prior to installing.

Step#	
1	<b>Verify you have all of the following parts included in the kit:</b> (1) JLT Oil Separator, (1) Angled mounting bracket, (2) fine thread machine screws, (1) Black mounting clamp, (1) ¼-20x ½" bolt, (2) ¼-20 nuts (1 extra in case you drop one)
2	<b>Gather all of the following tools needed for the installation:</b> Phillips screwdriver, 10mm socket and wrench
3	Remove factory PCV line by pulling tabs and pulling it off of the engine and intake system. 
4	Use supplied bolt and nut to mount JLT Bracket to pre-existing hole on fender apron tab. <b>2011-14 SEE STEP #6</b>
5	 <p>Mount Oil Separator to JLT Bracket with the two supplied machine screws. The longer hose will be closest to the valve cover. Route short hose to valve cover and route long hose to the intake tube.</p>

**6****2011-14 MOUNTING**

You have 2 options for mounting the Separator.

For both the sound tube rubber mount will need to be removed from the tab.

1) Using the included black mounting clamp, install on the BACK side of the tab on the driver side strut tower. Bolt will be on the bottom. Hold it tight and flat against the tab and tighten the bolt. **DO NOT OVER TIGHTEN, JUST SNUG SO IT DOESN'T MOVE.**



Use the supplied 1/4-20x1/2" bolt and attach JLT Bracket to the black mounting clamp using the smaller hole as shown below:



**OR**

2) You can drill 1/4" hole and use the supplied nut and bolt to mount the JLT bracket to the tab.

Now go back and follow from STEP 5

To properly clean the filter in the Oil Separator, remove it and spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles. Thanks for the business. If you have any questions, please e-mail [info@JLTtruecoldair.com](mailto:info@JLTtruecoldair.com) or call 757-335-1940. Our hours are Monday-Friday. 8:00am-5:00pm Eastern Time.

**JLT Performance Lifetime Satisfaction Guarantee. We want you to be a JLT Performance customer for life!** Your new JLT Performance product is warranted to be free from defects in materials and workmanship for the life of the *original retail purchaser*, subject to the limitations contained in our warranty found here. [www.jlttruecoldair.com/warranty](http://www.jlttruecoldair.com/warranty)

We guarantee workmanship, tunability and even a pathway to discounted upgrades for substantially improved items.

**Return Policy:** All returns will be subject to a 10%-25% restocking fee.

**Disclaimer:** JLT Performance Inc. makes no warranties whatsoever, expressed or implied, oral or written to any purchasers, except the warranty above. JLT Performance Inc. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by JLT Performance Inc. agree to hold harmless and indemnify JLT Performance Inc. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to JLT Performance Inc. for any claims arising out of use of its products.