



**JLT Oil Separator (2018-19 Mustang GT, 2019 Bullitt, & 2018-19 Mustang GT; Bullitt with Whipple Supercharger)
#3024D
Installation Instructions**

Please review complete instructions prior to installing.

Step#	
1	Verify you have all of the following parts included in the kit: (1) JLT Oil Separator, (1) Angled mounting bracket, (2) fine thread machine screws, (1) Firewall plug, (1) Sound tube cap, (1) 1/4-20x 1/2" bolt, (2) 1/4-20 nuts (1 extra incase you drop one)
2	Gather all of the following tools needed for the installation: Phillips screwdriver, 10mm socket and wrench. 15mm socket and ratchet (if equipped with strut bar)
3	Remove Factory engine cover, (you will need to remove your strut bar if your car is equipped with one) Remove factory PCV line by pulling tabs and pulling it off of the engine and intake system. 
4	We highly recommend removing the sound tube from the vehicle, included with your kit is a cap and plug for removal. The sound tube runs from the intake tube, to the firewall. It's only purpose it to pump engine noise into the cabin.
5	 <p>Mount JLT bracket to shock tower tab with supplied nut and bolt</p>

6



Use supplied screws to mount oil separator to bracket.
Run shorter hose to valve cover as shown, route long hose to intake and plug in.
The fittings in the end of the hoses will rotate if they need to be adjusted.

Reinstall engine cover.

To properly clean the filter in the Oil Separator, remove it and spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles. Thanks for the business. If you have any questions, please e-mail info@JLTtruecoldair.com or call 757-335-1940. Our hours are Monday-Friday. 8:00am-5:00pm Eastern Time.

JLT Performance Lifetime Satisfaction Guarantee. We want you to be a JLT Performance customer for life! Your new JLT Performance product is warranted to be free from defects in materials and workmanship for the life of the *original retail purchaser*, subject to the limitations contained in our warranty found here. www.jlttruecoldair.com/warranty
We guarantee workmanship, tunability and even a pathway to discounted upgrades for substantially improved items.
Return Policy: All returns will be subject to a 10%-25% restocking fee. Please visit www.JLTtruecoldair.com for complete return policy.
Disclaimer: JLT Performance Inc. makes no warranties whatsoever, expressed or implied, oral or written to any purchasers, except the warranty above. JLT Performance Inc. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by JLT Performance Inc. agree to hold harmless and indemnify JLT Performance Inc. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to JLT Performance Inc. for any claims arising out of use of its products.