

## JLT 3.0 Oil Separator, Driver Side (2015-2019 EcoBoost Mustang) #3029D

### Installation Instructions

Please review complete instructions prior to installing.


\*\*It is recommended to use a lift or place the front of the car on jack stands.\*\*

Remove engine cover (two 10mm bolts, two 8mm bolts). Remove the stock line from the PCV Valve under intake manifold on the engine block to the connection behind the throttle body.

Lower fitting



Upper fitting

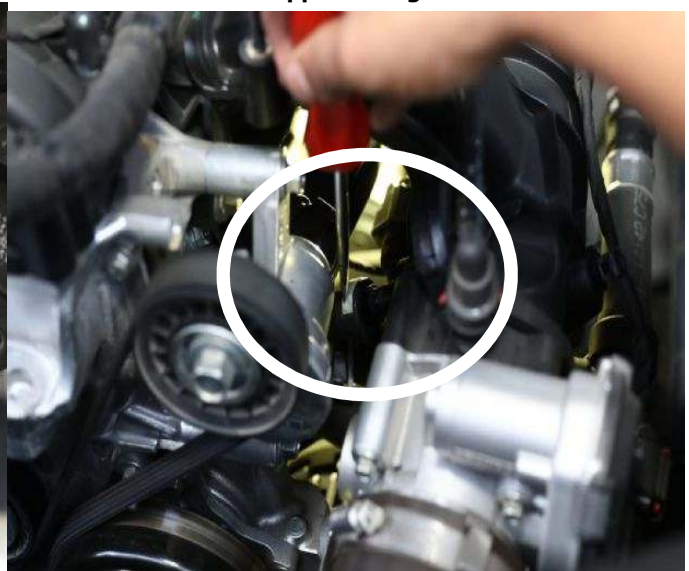

1

Use the supplied bolt and nut to mount JLT bracket to the tab on the driver side shock tower.



2


Use the supplied screws to mount the JLT Separator assembly to the JLT bracket routing the J hose (**J Side of can**) down toward the engine mount to connect to the PCV, and the T hose (**T Side of can**) under the intake for the fitting behind the throttle body.

3

From above, route the T hose under the throttle body and on to the fitting then push the connection locking tab.



From under, route J hose to PCV connection on the engine block

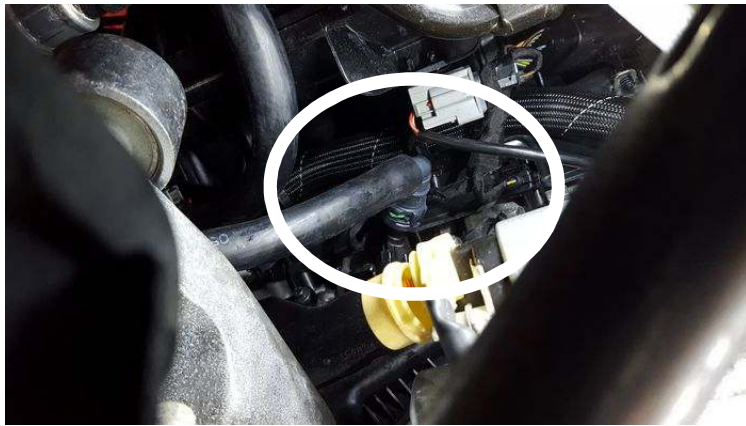

4



To properly clean the filter in the Oil Separator spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles. Thanks for the business. If you have any questions, please e-mail [info@JLTtruecoldair.com](mailto:info@JLTtruecoldair.com) or call 757-335-1940. Our hours are Monday-Friday. 8:00am – 5:00pm Eastern Time.

**JLT Performance Lifetime Satisfaction Guarantee.** We want you to be a JLT Performance customer for life! Your new JLT Performance product is warranted to be free from defects in materials and workmanship for the life of the *original retail purchaser*, subject to the limitations contained in our warranty found here. [www.jlttruecoldair.com/warranty](http://www.jlttruecoldair.com/warranty)

We guarantee workmanship, tunability and even a pathway to discounted upgrades for substantially improved items.

**Return Policy:** All returns will be subject to a 10%-25% restocking fee. Please visit [www.JLTtruecoldair.com](http://www.JLTtruecoldair.com) for complete return policy.

**Disclaimer:** JLT Performance Inc. makes no warranties whatsoever, expressed or implied, oral or written to any purchasers, except the warranty above. JLT Performance Inc. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by JLT Performance Inc. agree to hold harmless and indemnify JLT Performance Inc. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to JLT Performance Inc. for any claims arising out of use of its products.