



CB763 INSTALLATION INSTRUCTIONS


Tools required:

- 7mm and 3/8" socket
- Trim removal pliers

Instructions:

1. Lift vehicle and support with jack stands.
2. Remove the belly pan using a **7mm** socket. Carefully using a screw driver or a set of trim clip removal pliers, remove the plastic clips. Do not pull on the pan, with all of the clips removed, it should easily come out.

IMAGE 1

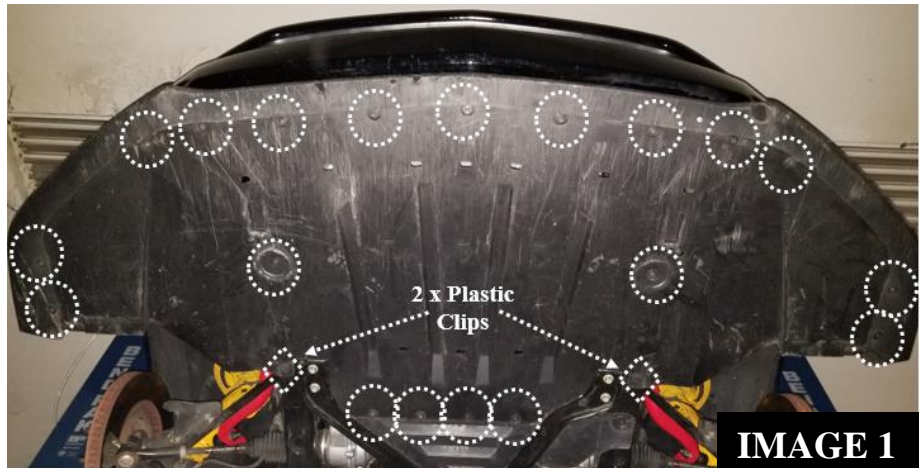

3. Insert the nut clips into the ends of the frame rail as shown. Remove any nut clips if your vehicle already has them.
- #### **IMAGE 2**
4. Using the provided bolts and washers and a **3/8"** socket or wrench, fasten the chassis brace to the vehicle. Tighten by hand until secure.
 5. Replace the belly pan with the stock screws, use caution as these screws can strip easily.
 6. Lower vehicle.



CB763 can also be installed with the gussets facing outward to help clear intercoolers and oil cooler

WWW.BMRSUSPENSION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to vehicle/person during installation or use of this product.