





## SB762 – 7/8" (22mm) Rear Sway Bar for 2015-22 S550 Mustang

### TOOLS REQUIRED

- Hydraulic jack and jack stands
- Wrenches and Sockets – 10mm, 13mm, 18mm
- Allen wrench – 6mm, 3/16"

### INSTALLATION:

1. Lift the rear of the vehicle and safely support with jack stands under the cradle.
2. Using a 10mm wrench or socket, remove the brake hose bolts out on the sway bar end link brackets as shown in **IMAGE 1**.
3. Using the 6mm Allen wrench to hold the center of the end link, remove the nut using an 18mm wrench as shown in **IMAGE 2**. Duplicate for the other side.
4. Using a 13mm socket, remove the (4) bolts that retain the sway bar bushings to the sub-frame. Remove the sway bar.
5. Assemble the BMR supplied polyurethane bushings and saddles onto the new sway bar and install the sway bar using the factory mounting hardware.
6. Torque mounting bolts to 24 ft/lbs.
7. To re-use the brake hose brackets on your BMR sway bar, rotate the bracket as shown and mount as illustrated in **IMAGE 3**. Tighten the end link nut using the 6mm Allen wrench and 18mm wrench. Tighten the 10mm brake hose bolt.
8. Using a grease gun, lube the polyurethane bushings with synthetic grease. Lower vehicle.
9. Lower vehicle.

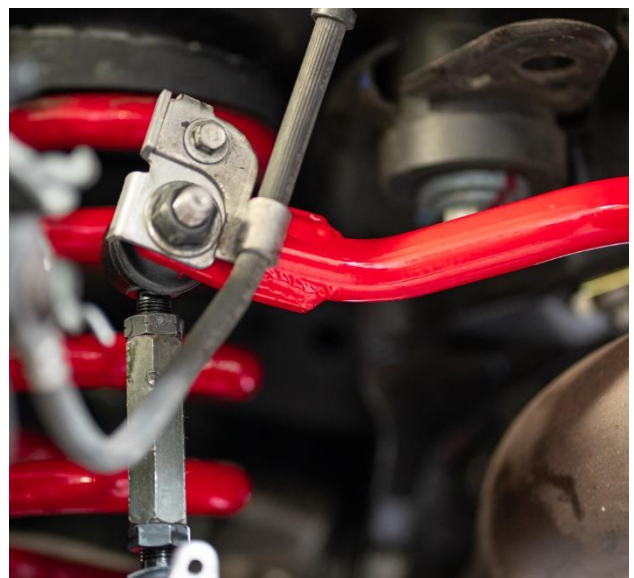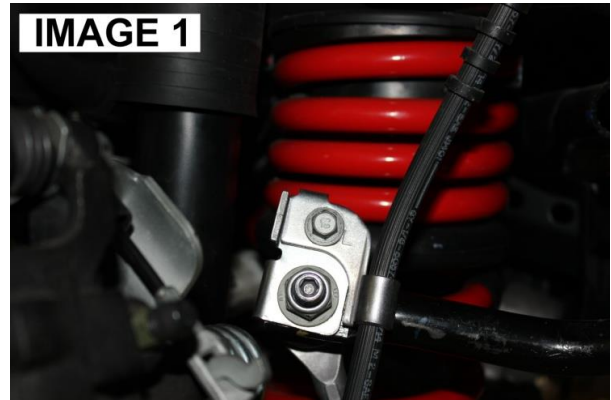

[WWW.BMRSUSPENSION.COM](http://WWW.BMRSUSPENSION.COM)

*This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, Buyer assumes all risk of any damage caused to the vehicle or person during installation or use of this product.*